


4' x 10' Cedar Dock Kit

10' Dock Section

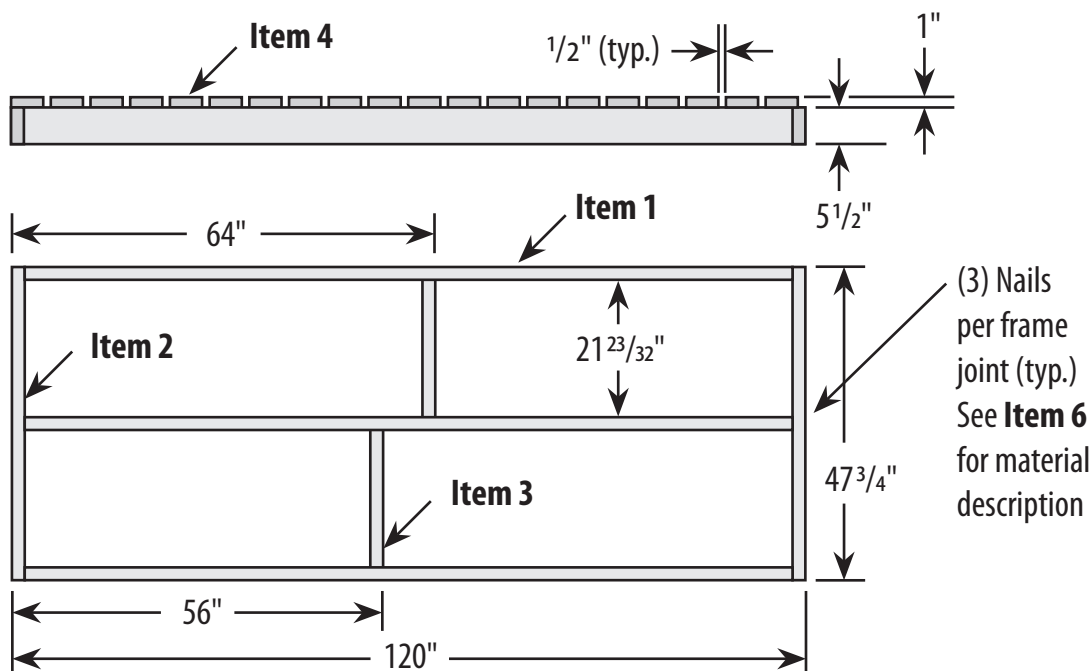

Item	Quantity	Part No.	Description
1	3	TD10157	2" x 6" x 117 1/8" Cedar
2	2	TD10151	2" x 6" x 47 3/4" Cedar
3	2	TD10152	2" x 6" x 21 23/32" Cedar
4	20	TD10153	5/4 x 6" x 47 3/4" Cedar
5	180	-----	2 1/2" Galvanized Nails
6	30	-----	3 1/2" Galvanized Nails

Tools required for assembly: hammer and tape measure

1. Work in a clean flat area.
2. Nail frame together using 3 1/2" galvanized nails.
3. Measure frame diagonally from corner to corner to make sure frame is square before nailing deck boards into place. Measurement should be within 1/8".
4. After frame is nailed together and squared, take your tape measure, measuring from one end of the frame and make a mark every 6". This mark will be the leading edge of your deck boards. The last 6" mark will be the end of the frame. The first board will be about 1/2" spacing from the starting end of the frame. The last board will be flush with the other end of the frame.
5. When nailing deck boards into place, nail at least 3/4" from the end to avoid splitting.